


OPERATING MANUAL

DMX Demultiplexer 3012C Mk5 RDM

Version: Printed Circuit Board 12-channel
12x 0...+10V Out, 12x 0...-10V Out

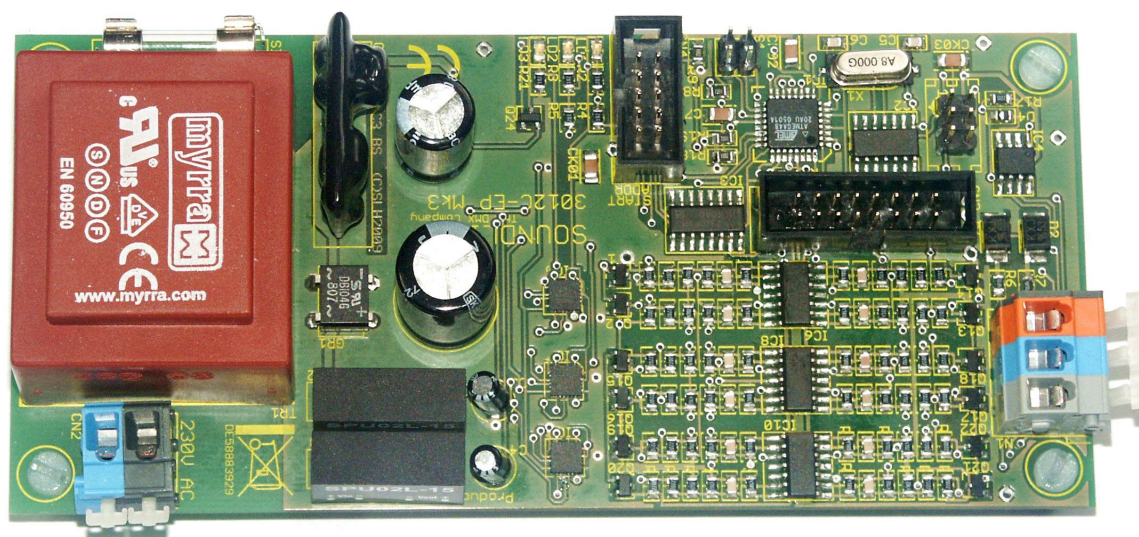

(C) SOUNDLIGHT 1996-2013* ALL RIGHTS RESERVED * NO PART OF THIS MANUAL MAY BE REPRODUCED, DUPLICATED OR USED COMMERCIALY WITHOUT THE PRIOR WRITTEN CONSENT OF THE OWNER * ALL STATEMENTS WITHIN THIS MANUAL HAVE BEEN CHECKED CAREFULLY AND ARE BELIEVED TO BE ACCURATE, HOWEVER SOUNDLIGHT DOES NOT ASSUME ANY RESPONSIBILITY FOR ERRORS OR OMISSIONS. * THE USER HAS TO CHECK THE SUITABILITY OF THE EQUIPMENT FOR THE INTENDED USE. SOUNDLIGHT EXPRESSLY EXCLUDES ANY RESPONSIBILITY FOR DAMAGES - DIRECT OR INDIRECT - WHICH MAY OCCUR DUE TO MISUSE, UNPROPER INSTALLATION, WRONG OPERATING CONDITIONS AND NON-COMPLIANCE TO THE INSTRUMENT'S INSTRUCTIONS, AS WELL AS DISREGARD OF EXISTING SAFETY STANDARDS AND REGULATIONS.

SOUNDLIGHT The DMX Company Bennigser Strasse 1 D-30974 Wennigsen-Steinkrug Tel. +49-(0)5045-912 93-11

Thank you for choosing a SOUNDLIGHT device.

The SOUNDLIGHT DMX Demultiplexer 3012C-EP is an intelligent DMX demultiplexer decoding digital data complying with standards USITT DMX512, DIN 56930-2, ANSI E1-11 DMX512-A and ANSI E1-20 DMX RDM. The card drives twelve analog voltage outputs. The decoder can be used with all standard lighting control systems. Its special advantages include:

- **universal protocol decoding**
Recognizes all variants of the protocol as defined by USITT / ESTA / DIN
- **future-proof**
The unit is software controlled and can easily be adapted to any change in protocol definition.
- **buffered output**
Integrated output buffers provide excellent drive characteristics
- **simple supply**
The power supply is from standard mains voltage 230V AC 50 Hz
- **signal loss**
In the case of a loss of the drive signal a pre-definable action will be taken.
- **cost-effective**
The SOUNDLIGHT 3012C-EP is a cost-effective solution for many purposes.

APPLICATIONS

The DMX demultiplexer 3012C-EP is ideally suited for all kinds of analog control applications. It features 0...+10V, 1...10V or 0...-10V output drive capability to control entertainment lighting or architectural lighting gear.

NOMENCLATURE

These symbols are used within this manual:



DANGER ! May cause harm to user and/or equipment



INFO: How to setup your device



INFO: Status information

UNPACKING

Please unpack carefully and check that all items are intact. When leaving our factory, the card has been in good condition. In case of damage during transport please notify the carrier immediately and arrange for a written and signed damage report by the carrier. Please note that individual deadlines

may apply to claim transport damages. We will only be able to replace goods damaged during transit if we receive a written and signed confirmation issued by the freight forwarder. Make sure you receive such a document and send to us a.s.a.p.

When unpacking, you should identify these items:

- * the interface card 3012C-EP
- * the start address board 3000P
- * this manual

Power Supply

Power supply is from mains 230V AC. Power must be connected to mains inlet terminals (black/blue) CN2.

SAFETY NOTE: Mains voltage can be dangerous to health. Installation and wiring must be performed by skilled and trained technicians only. Power must be completely removed while works are carried out. Double-check wiring before re-applying power.



DMX Input


The DMX signal is applied to 3-pin input CN1. Pin assignment is as follows:

Pin1 grey	XLR Contact 1 = GND / Shield
Pin2 blue	XLR Contact 2 = DMX-
Pin3 orange	XLR Contact 3 = DMX+

This pin assignment refers to standards USITT DMX-512/1990 and ANSI E1-11 DMX-512A.

CN4: Connector for start address board 3000P or 3003P

CN3: Output Connector 1-12

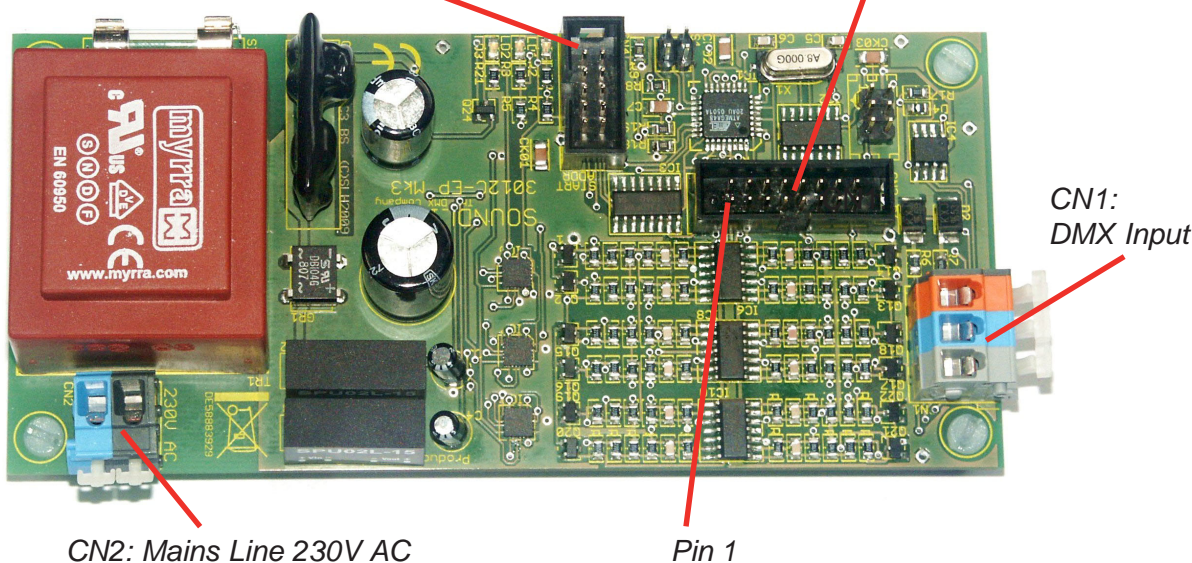

CN2: Mains Line 230V AC

Pin 1

Analog Output

The dimmer control signals are provided on a 16-pin ribbon connector. Suitable connectors are available from a variety of manufacturers. Outputs are short circuit protected and designed to drive a load of 1mA @ 10VDC (10kOhms input impedance). Output voltage can be trimmed using special RDM commands (see chapter RDM).

Analog output connector: CN3


1:	Output 1
2:	Output 2
3:	Output 3
4:	Output 4
5:	Output 5
6:	Output 6
7:	Output 7
8:	Output 8
9:	Output 9
10:	Output 10
11:	Output 11
12:	Output 12
13,14,15,16:	GND, Shield

Installation

4 mounting holes 3,2mm (marked) are provided for installation of the pcb. We recommend to use plastic spacers (min. 6mm) to provide sufficient isolation distance when using a metallic housing.

Signal Indicators

 The demultiplexer status is signalled using three indicator LEDs.



green: Operation, DMX signal present
red: ERROR
normally OFF
Blinks when data errors occur or when DMX signal is missing.

Red and Green blink 4 times alternatively when a programming cycle is being performed (e.g. start address programming).
Red/Green blink repeatedly on IDENTIFY


yellow: off: output voltage 0..+10V, on: output voltage 0...-10V selected

Start Address Switches

The DMX relay demultiplexer 3012C-EP has been preset to DMX start address 001. If another start address is required, it must be set using a start address board 3000P, 3003P or 3005P. The start address board 3000P is contained with delivery, the start address board 3003P or 3005P is optionally available. The 3012C-EP can be operated with or without start address board attached.

Use the BCD switches to set the DMX start address, that is the address of the first DMX channel (DMX data slot) used to control output #1. Setting is straightforward, there is no binary calculation required as would be with DIP switches.

S3: Hundreds
S2: Tens
S1: Ones

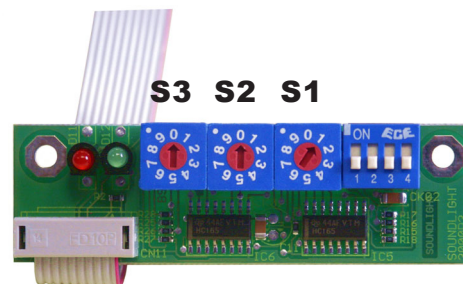

The allowed DMX start address range is 001 ... 512. With settings above 501, only the first outputs will be available. Settings above 512 are reserved for special control purposes (see below).

Service Settings

The demultiplexer 3012C can be set to various service settings. The service settings are provided to test individual outputs. These settings are available:



801: Output 1 set to 100%
802: Output 2 set to 100%
803: Output 3 set to 100%
804: Output 4 set to 100%
805: Output 5 set to 100%
usw. bis
812: Output 12 set to 100%

Test Programs

The demultiplexer 3012C features some self-test programs to check the output performance.



997: All outputs blink simultaneously
998: All outputs ramp simultaneously from 0% to 100%
999: Running light 1-12

DIP Switches

The DMX demultiplexer 3012C-EP can be set to various operating modes using DIP switches 1...4:



S1: HOLD Mode

S1=OFF

HOLD Mode OFF

S1=ON

HOLD Mode ON ("Keep Last Look")

S2: Safety Level

When the HOLD MODE is not activated, these settings apply:

S2=OFF

All outputs go to "OFF" (0%)

S2=ON

All outputs go to "ON" (100%)

S3: Output Smoothing

S3=OFF

Standard mode (fast)

S3=ON

Interpolation mode (slow)

S4: MASTER Modus

S4=OFF

12-ch Mode

S4=ON

13-ch Mode (CH13 = MASTER)

Output Polarity

The 3012C-EP can be programmed to provide 0...+10V output (default setting) or to 0...-10V output (negative polarity). To configure the output polarity, pls proceed as follows:

1. - remove power (disconnect mains voltage)
 2. - Set a start address 880 to select negative output polarity (0...-10V), or
set a start address 881 to select positive output polarity (0...+10V)
 3. - re-apply power (connect to mains voltage)
 4. - the LEDs will indicate a programming cycle (red/green blinking 4x alternatively)
 5. - remove power and re-set the standard start address
- done.

The DMX Demultiplexer 3012C-EP complies to DMX RDM standard 1.0.

The screenshot displays the DMX RDM software interface. At the top, the device address is 53 4C : 30 12 01 17. The remote device is identified as SOUNDLIGHT The DMX Company 3012C-EP Mk5 Demuxer12-channel, with software versions SW Mk 5.1 and RDM Mk 3.8. A legend on the right defines parameter keys: Required Parameter (blue), Supported Parameter (green), Manufacturer Parameter (red), and PLASA Reserved Parameter (black). The interface is divided into two main sections: 'Root and Sub Devices' and 'Supported Parameters'.

Root and Sub Devices

Device	Label
Root Device	3012C-EP DMX Demux 12-channel

Supported Parameters

PID	Parameter
\$0001	DISC_UNIQUE_BRANCH
\$0002	DISC_MUTE
\$0003	DISC_UN_MUTE
\$0015	COMMS_STATUS
\$0020	QUEUED_MESSAGE
\$0030	STATUS_MESSAGES
\$0031	STATUS_ID_DESCRIPTION
\$0050	SUPPORTED_PARAMETERS
\$0051	PARAMETER_DESCRIPTION
\$0060	DEVICE_INFO
\$0070	PRODUCT_DETAIL_ID_LIST
\$0080	DEVICE_MODEL_DESCRIPTION
\$0081	MANUFACTURER_LABEL
\$0082	DEVICE_LABEL
\$0090	FACTORY_DEFAULTS
\$00C0	SOFTWARE_VERSION_LABEL
\$00E0	DMX_PERSONALITY
\$00E1	DMX_PERSONALITY_DESCRIPTION
\$00F0	DMX_START_ADDRESS
\$0120	SLOT_INFO
\$0121	SLOT_DESCRIPTION
\$0122	DEFAULT_SLOT_VALUE
\$0141	DMX_FAIL_MODE
\$0200	SENSOR_DEFINITION
\$0201	SENSOR_VALUE
\$0400	DEVICE_HOURS
\$0405	DEVICE_POWER_CYCLES
\$0501	DISPLAY_LEVEL
\$0640	LOCK_PIN
\$0641	LOCK_STATE
\$0642	LOCK_STATE_DESCRIPTION
\$1000	IDENTIFY_DEVICE
\$1001	RESET_DEVICE
\$1010	POWER_STATE
\$1040	IDENTIFY_MODE
\$80F1	DMX HOLD MODE
\$8301	DMX FAILMODE
\$8330	PIN SETTING
\$8331	LOCK STATE
\$8332	LOCK STATE DESCRIPT.
\$8340	IDENTIFY MODE
\$DCCA	DC OUT CALIBRATION
\$FF01	RDM FACTORY SETUP

Table of RDM functions of the DMX demultiplexer 3012C-EP

For more information regarding DMX RDM pls refer to our website, www.dmxrdm.eu

Additional information can be obtained from these sites:

www.rdmprotocol.org

www.rdm.soundlight.de

The RDM protocol working group website

The SOUNDLIGHT RDM website

DMX Personalities

The 3012C-EP is identified as "Demultiplexer" within the "DIMMER" category. It can be set to four DMX personalities (operating modes):


using fast output :

- DMX PERSONALITY 1
as 12-channel unit using 12 individually controllable outputs
- DMX PERSONALITY 2
as 13-channel unit using 12 controllable outputs plus master (CH13)

using averaged (slow) output :

- DMX PERSONALITY 3
as 12-channel unit using 12 individually controllable outputs
- DMX PERSONALITY 4
as 13-channel unit using 12 controllable outputs plus master (CH13)

Select the appropriate personality to select the desired operating mode.

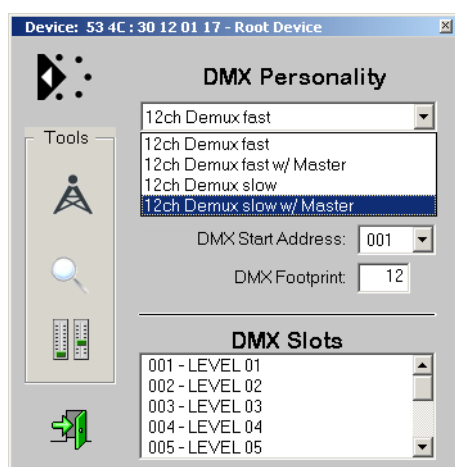

Personality-Menu

(recorded with JESE GET/SET RDM Controller)


RDM Special Functions:

RESET_DEVICE:	Create a warm reset using parameter 1 Create a cold reset using parameter 255 (FFhex)
DEVICE_POWER_CYCLES:	Reads the number of device power-ups
IDENTIFY:	All outputs flashing
SET_FACTORY_DEFAULTS:	Resets <u>all settings</u> to factory default values
POWER_STATE:	Sets the output polarity Using parameter 255(FF hex) to set positive polarity (0...+10V) Using parameter 00 to set negative polarity (0...-10V)
DEVICE_HOURS:	Reads the number of operating hours


IMPORTANT NOTICE: Start address and DIP switches (on start address board 3000P) are getting disabled when programming a start address or personality via DMX RDM. Then RDM programming prevails. Any address setting 900...999 (simply set the hundreds position to "9") will **re-activate** the switches and override existing RDM assignments.

RDM Sensors:

Der 3012C-EP (from Rev. 5.1) consists of sensors to monitor power supply and internal pc board temperature. Sensor ranges are internally set. Upon under- or overvoltage a warning status message will be generated automatically.

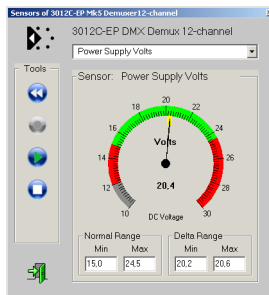



Voltage sensor
typ. supply voltage: 20V

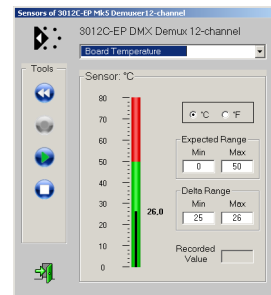

Temperature sensor
0...50°C

RDM Master Mode:

Use the personality settings to select DMX master mode. DMX input channel 13 will be set as master channel. Output will only be generated when the master channel is set to a value <>0.

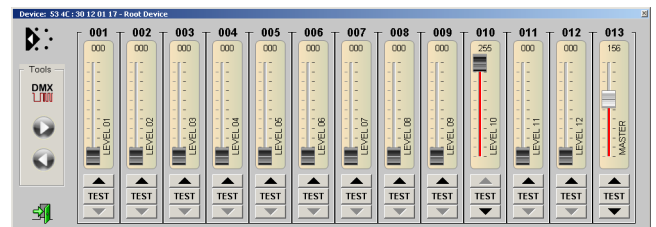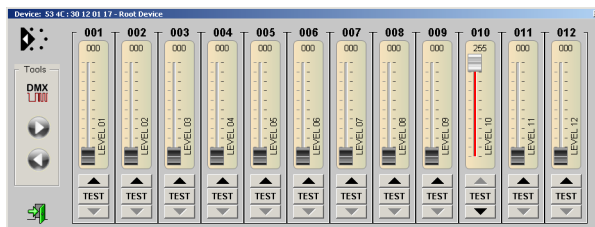

RDM Output Calibration:

The demultiplexer output voltage can be calibrated using RDM function DCCA "DC OUT CALIBRATION".

DC OUT CAL MENU

This menu allows to set 12 individual calibration values for outputs 1...12. Data entry uses hexadecimal number format. (shown: JESE GET/SET controller)

GET entry values:

00 00

displays list of calibration factors

00 xx

displays calibration factor for channel xx (xx=01...0C)

SET entry values:

00 xx yy

Sets calibration factor yy for channel xx (yy=00...FF; xx=01...0C)

FF FF yy

Sets calibration factor yy for all outputs

IMPORTANT NOTICE! Do not change any settings when you do not have appropriate measurement instruments or basic knowledge of RDM programming. The 3012C-EP has been set to default values to match technical specifications.

TECHNICAL DATA

Dimensions:	140 mm x 65 mm x 25 mm
Power supply:	230V AC approx. 4 W
DMX IN:	1 Unit Load
DMX OUT:	fed-thru
Analog Out:	0...+10V, max. 1 mA alternativ 0...-10V, max. -1mA
Order code:	3012C-EP

CE Conformity



This DMX demultiplexer is microprocessor controlled and uses high frequency (8 MHz quartz). The interface has been tested in our EMC lab to comply with CE requirements. To ensure the best performance regarding radiated and conducted emissions we suggest to install the interface card in a closed, conductive (e.g. metal) housing, which must be connected to GND. Please make sure that shielded data cable is used and the shield is connected properly to the GND pin. Shield must never make contact to other signal lines.

FCC STATEMENT

This product has been tested and complies with the specifications for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used according to the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which is found by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment or devices
- Connect the equipment to an outlet other than the receiver's
- Consult a dealer or an experienced radio/TV technician for assistance

FCC Caution: Any change or modification to the product not expressly approved by SLH could void the user's authority to operate the device.

DISTURBANCES

If a trouble-free operation cannot be guaranteed, disconnect the demultiplexer interface and secure it against unwanted operation. This is especially necessary, when

- the unit has visible damages;
- the unit does not operate;
- internal parts are loose;
- connection cables show visible damages.

SERVICE

There are no parts within the DMX demultiplexer 3012C-EP which require the user's attention. Should your unit require servicing, please send it to the factory, freight paid.

LIMITED WARRANTY

This DMX interface is warranted against defects in materials and workmanship for a period of 12 months, beginning with the date of purchase. The warranty is limited to repair or exchange of the hardware product; no further liability is assumed. SOUNDLIGHT is not responsible for damages or for loss of data, sales or profit which arise from usage or breakdown of the hardware product. In Germany, SOUNDLIGHT will repair or replace established defects in hardware, provided that the defective part is sent in, freight paid, through the responsible dealer along with warranty card and/or sales receipt prior to expiration of warranty.

Warranty is void:

- when modifying or trying to repair the unit without authorisation;
- modification of the circuitry;
- damages by interference of other persons;
- operation which is not in accordance with the manual;
- connection to wrong voltage or current;
- misuse.

END OF LIFETIME




When the useful lifetime of this product has been reached, it must be disposed of properly. Electronic devices must not be placed in domestic waste. Consult your local authorities to find the nearest collection point of used electric and electronic devices. SOUNDLIGHT is a WEEE registered company (Reg No. DE58883929).

ACCESSORIES


To set the DMX start address and change the operating parameters, a DMX start address board is needed. These boards are optionally available:

DMX START ADDRESS BOARD 3000P

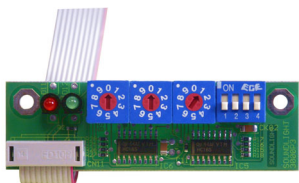

Three address BCD switches and a DIP switch to set operating parameters. This is the standard board, which is compatible with all our decoders (both PCB and DIN rail mount).

DMX START ADDRESS BOARD 3003P RDM

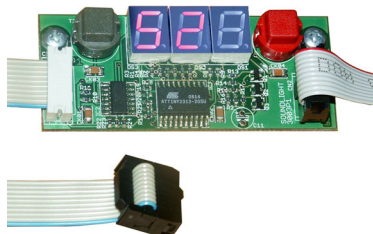

Start address board with LED display and pushbuttons to set the DMX start address. Address is retained in nonvolatile onboard memory, two settings may be stored. DIP switches are emulated by soft functions F1...F4.

DMX START ADDRESS BOARD 3005P RDM



Start address board with LCD display and rotary encoder to set the DMX start address, DMX personality and DMX HOLD mode. Settings are retained in nonvolatile onboard memory.